

ZELLER SLEEPER CHAIR

→ USER MANUAL



WARNING: *Read this document prior to using product.*

Version 1.2

Release date: 19/05/26

 
 
 
 


+44 (0)1622 237830

sales@pineapplecontracts.com

Pineapple

TECHNICAL DRAWINGS

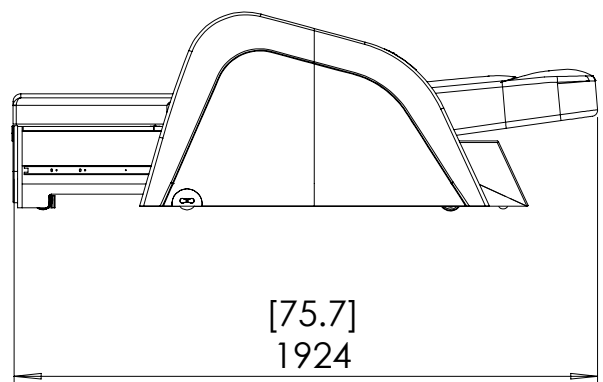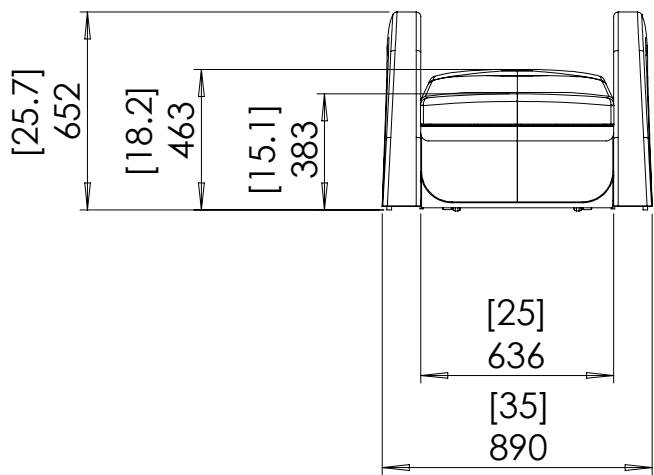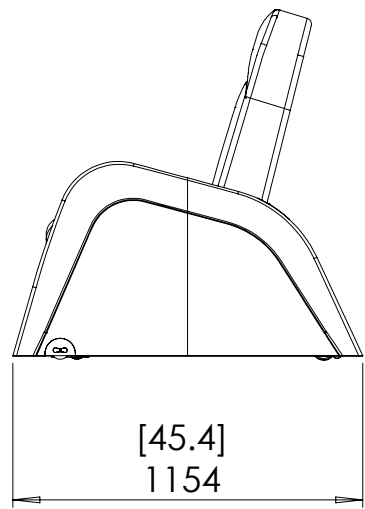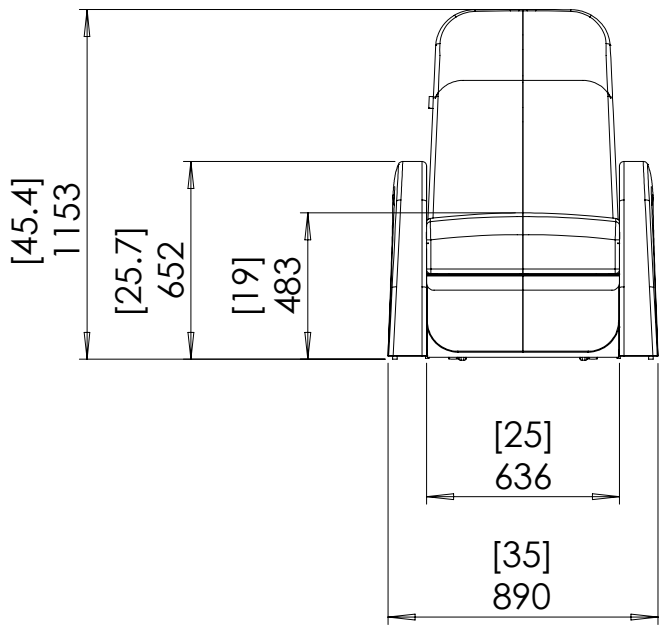

[] = Inches

 
= Millimeter

→ LOCKING ZELLER SLEEP CHAIR WHEELS

Locate the lockable castors towards the front of the right and left arms.

To lock the wheels, push the switch to the 'ON' position on both arms.

To unlock the wheels, push the switch to the 'OFF' position on both arms.

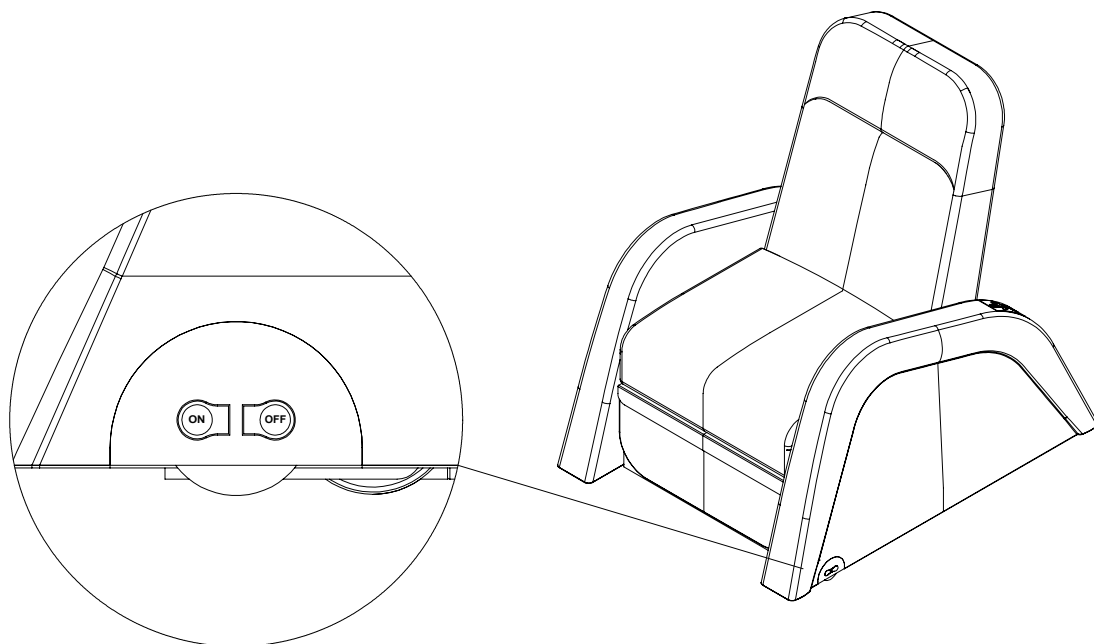

→ SETTING ZELLER TO 'FLAT POSITION'

01

 
 
! - DISCLAIMER

Do not sit in the chair whilst moving the position of the backrest.

Ensure wheels are locked in the 'ON' position.

Locate the button on the rear of the left arm.

Using your left hand, press firmly on the button whilst simultaneously using your right hand to move the backrest into a flat position.

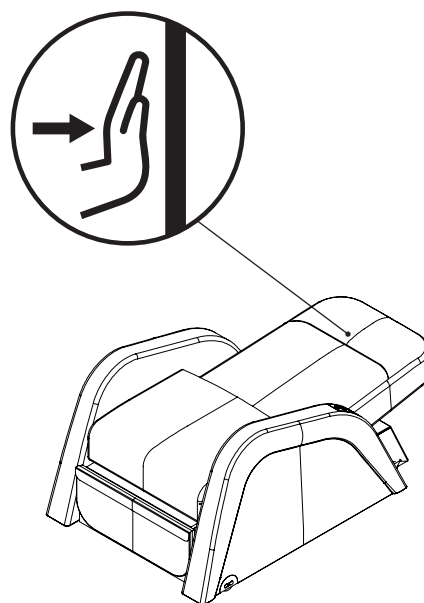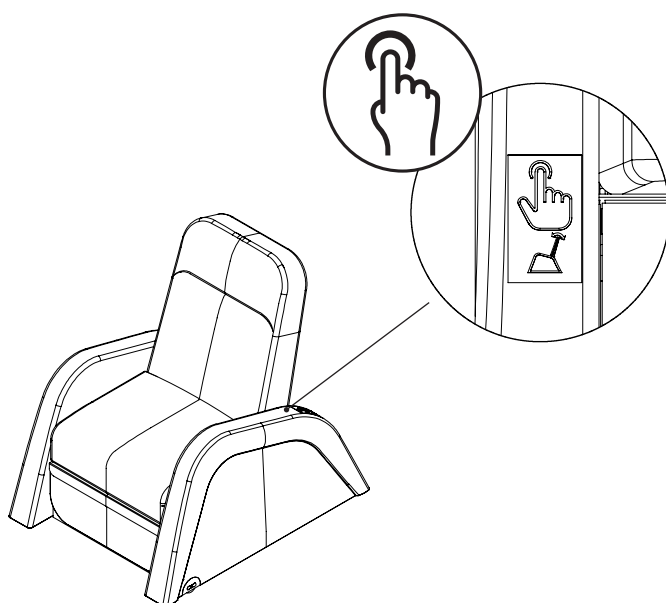


02

Pull the drawer using the tab provided until fully extended.

Unfold the seat pad so that it extends to the end of the drawer.

 To return Zeller to 'chair' position, reverse the steps.

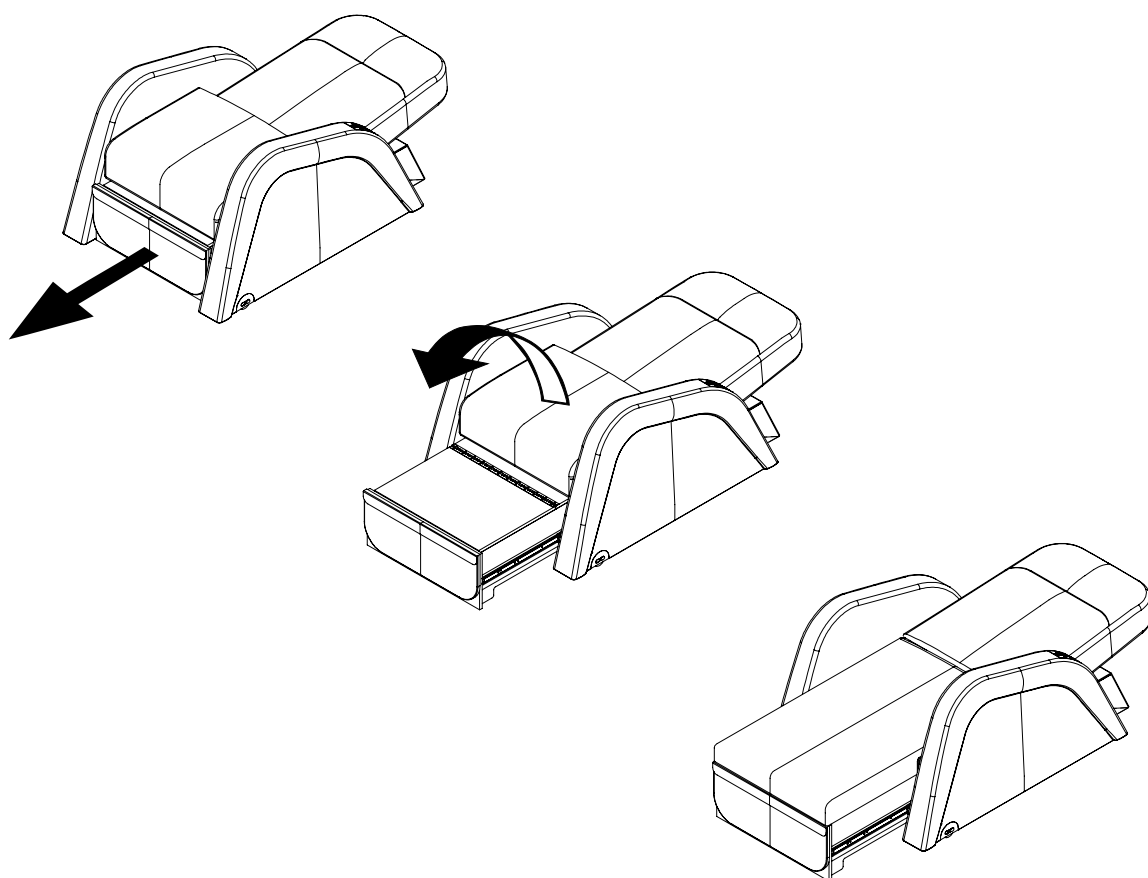

→ DISCLAIMER

- Ensure the proper and adequate hardware is used to secure furniture
- Ensure fixings are appropriate for the anchoring material
- Use fixings of an appropriate strength and consider using security fixings in challenging environments
- Consider using high strength thread-locker on fixings in challenging environments
- Ensure all gaps are sealed with the appropriate anti-pick mastic after product installation if necessary
- Please read all instructions carefully to ensure proper installation. Failure to read and follow instructions may result in inadequate product installation and void of warranty
- Pineapple shall not be held liable for any consequences caused by the improper installation of products to the installer or the end user