


RYNO ADIRONDACK

→ FLOOR FIXING

INSTRUCTIONS

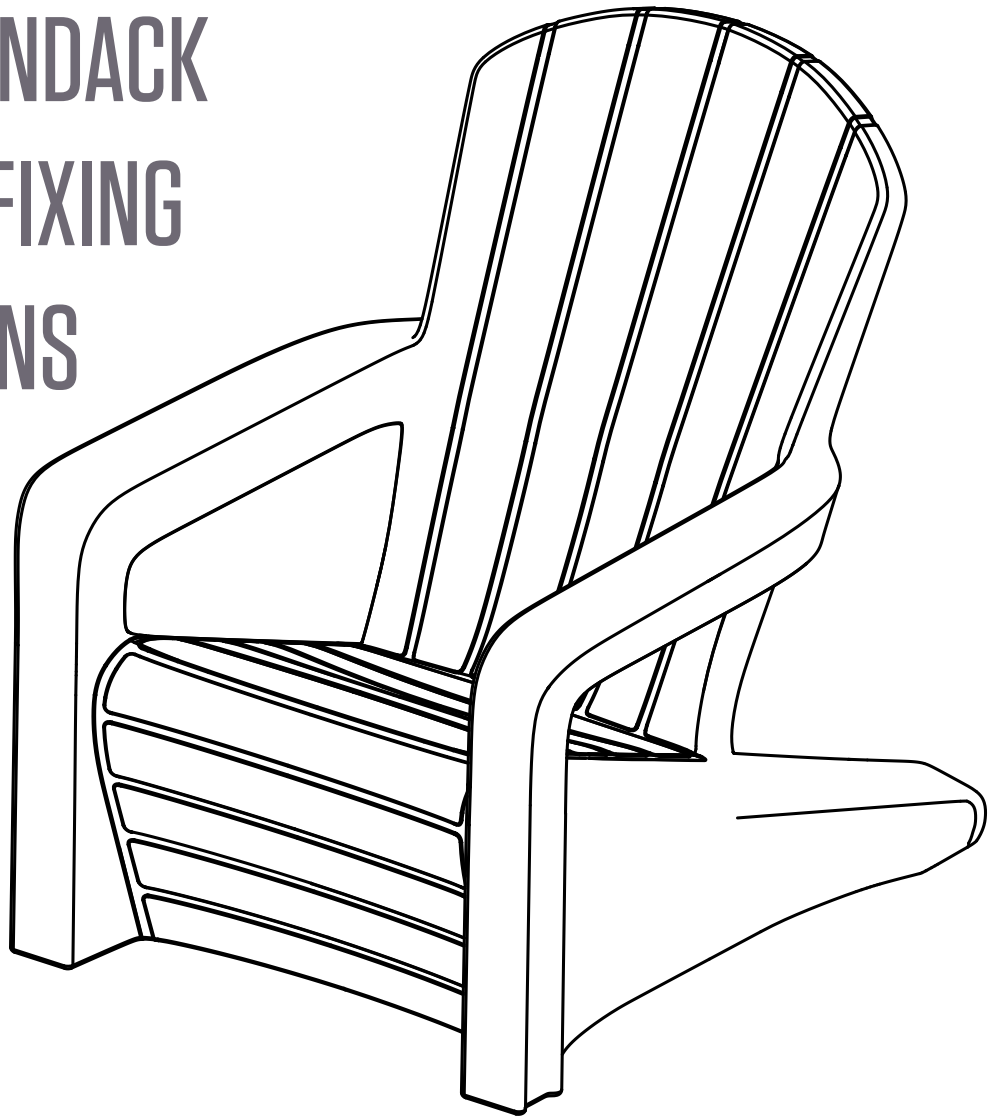

WARNING: Read this document prior to installation.

Version 1

Release date: 14/09/26




+44 (0)1622 237830


sales@pineapplecontracts.com

Pineapple


REQUIRED EQUIPMENT

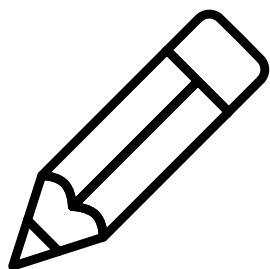


→ Marking device
(not supplied)

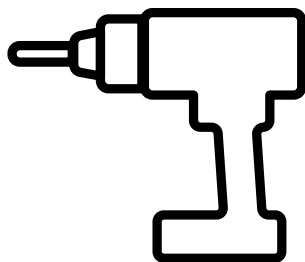

→ Cordless Drill
(not supplied)

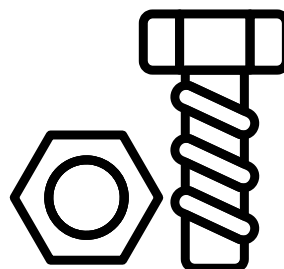

→ Appropriate floor
fixing hardware
(not supplied)

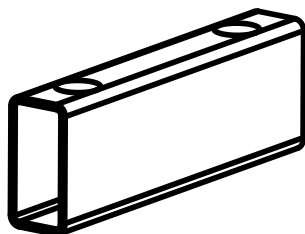


→ Floor fixing
blocks and fixings
(provided)

RYNO ADIRONDACK → FLOOR FIXING INSTRUCTIONS


01

- Place chair in desired location and slide templates under chair ensuring guidelines line up with the drill points and then tape guides to floor.

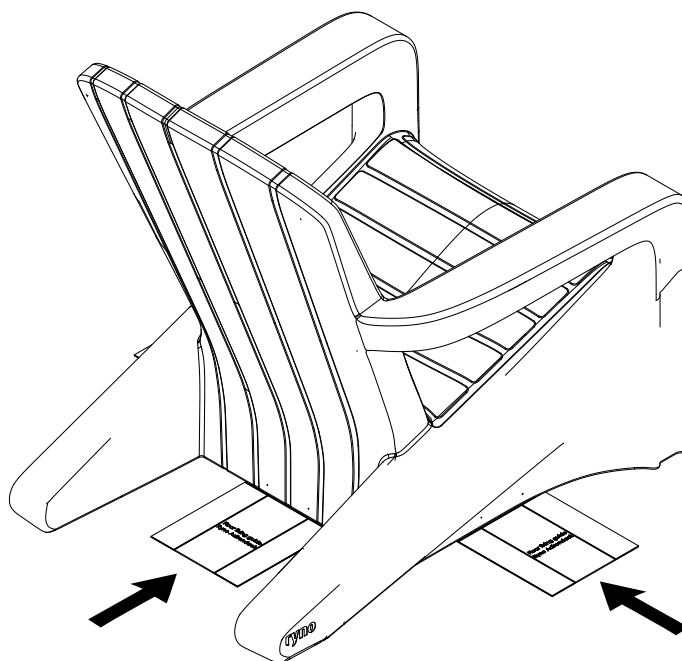

02


- Remove chair and use guides to mark out mounting hole for floor brackets. Drill into floor and install appropriate hardware, fixing brackets to floor with appropriate bolts.

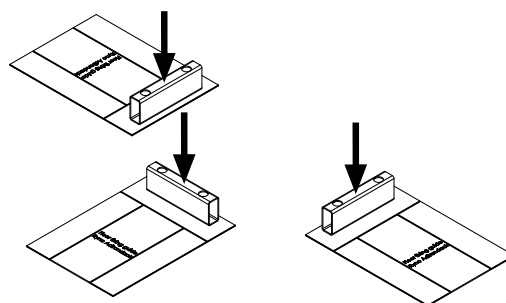

RYNO ADIRONDACK → FLOOR FIXING INSTRUCTIONS


03

- Lower chair over brackets ensuring they are located into the channels and the chair lies flat to the floor.

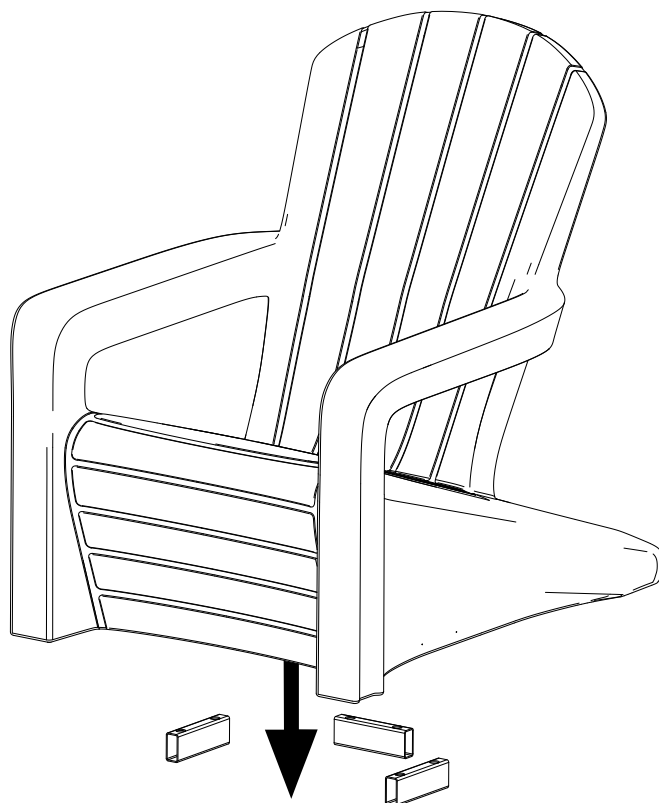

04

- Install screws provided with low torque. The head of the screw should sit under the surface of the chair to ensure the screw extends through both sides of the bracket.

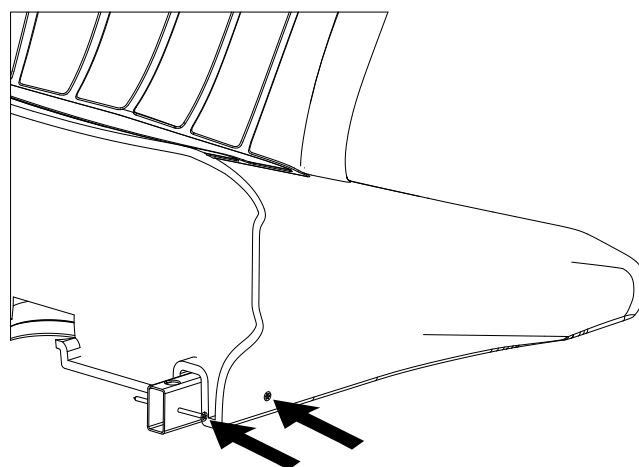

→ DISCLAIMER

- Ensure the proper and adequate hardware is used to secure furniture
- Ensure fixings are appropriate for the anchoring material
- Use fixings of an appropriate strength and consider using security fixings in challenging environments
- Consider using high strength thread-locker on fixings in challenging environments
- Ensure all gaps are sealed with the appropriate anti-pick mastic after product installation if necessary
- Please read all instructions carefully to ensure proper installation. Failure to read and follow instructions may result in inadequate product installation and void of warranty
- Pineapple shall not be held liable for any consequences caused by the improper installation of products to the installer or the end user