


RYNO SAFEWASTE XL

→ FLOOR FIXING INSTRUCTIONS

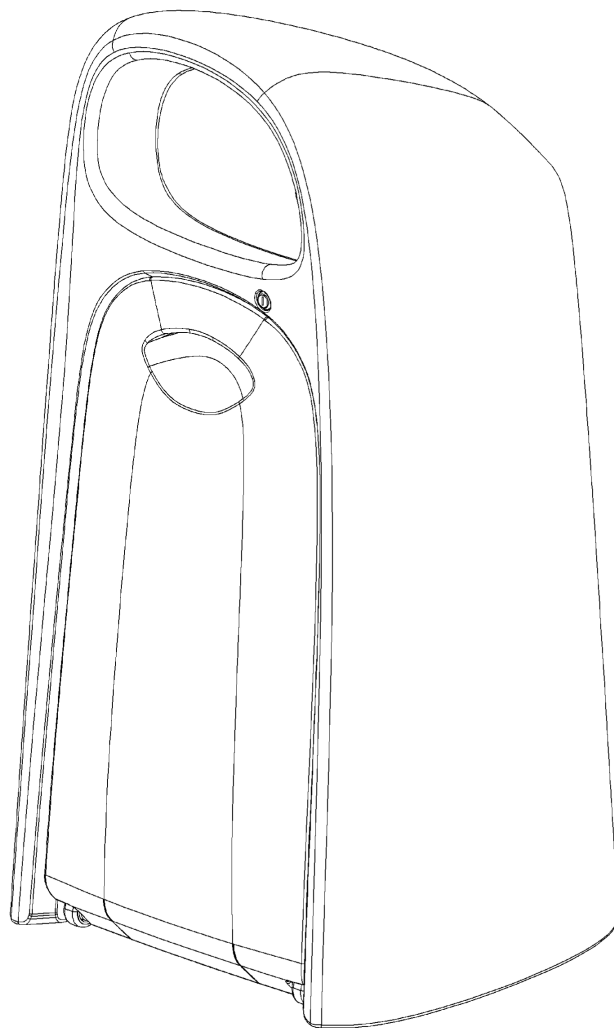

WARNING: Read this document prior to installation.


Version 1
Release date: 03/08/26




+44 (0)1622 237830
sales@pineapplecontracts.com

Pineapple


REQUIRED EQUIPMENT

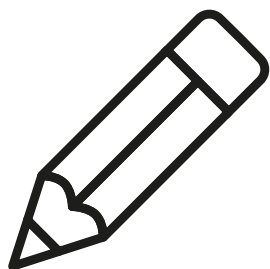

→ Marking device
(not supplied)

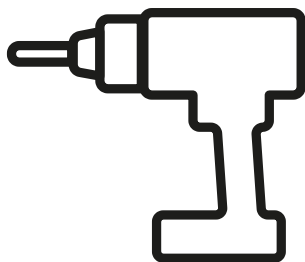

→ Cordless Drill
(not supplied)

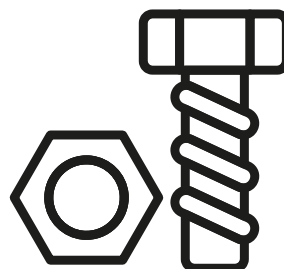


→ Appropriate floor
fixing hardware
(not supplied)

RYNO SAFEWASTE XL → FLOOR FIXING INSTRUCTIONS

01


→ Remove trolley and ensure
base plate is securely
fastened to the main body
of the product.

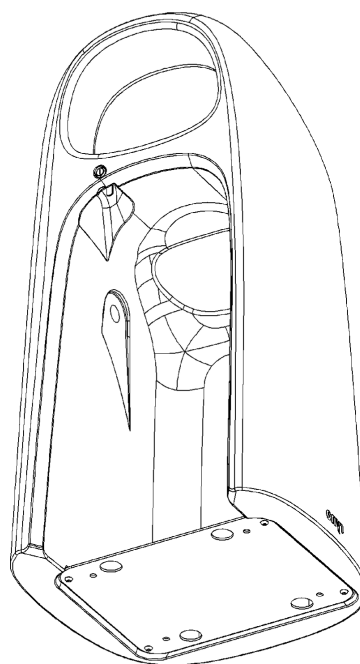

RYNO SAFEWASTE XL → FLOOR FIXING INSTRUCTIONS


02

- Place the product in its final location and mark out the x 4 fixing locations using the baseplate as a guide.

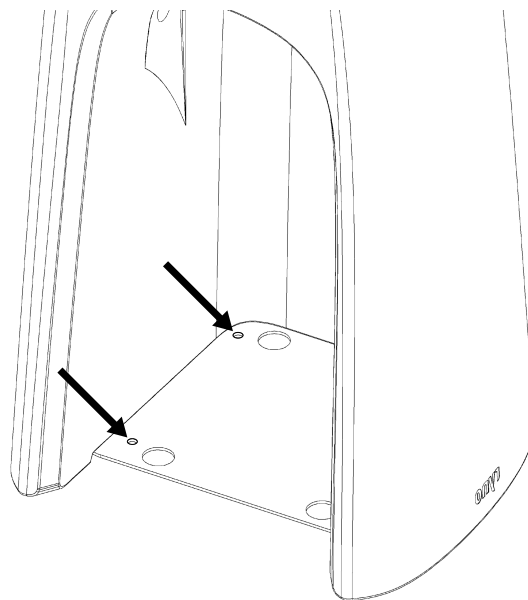

03

- Use the appropriate fixings and washers for the substrate to secure the baseplate to the ground. Pre-drill holes where appropriate.

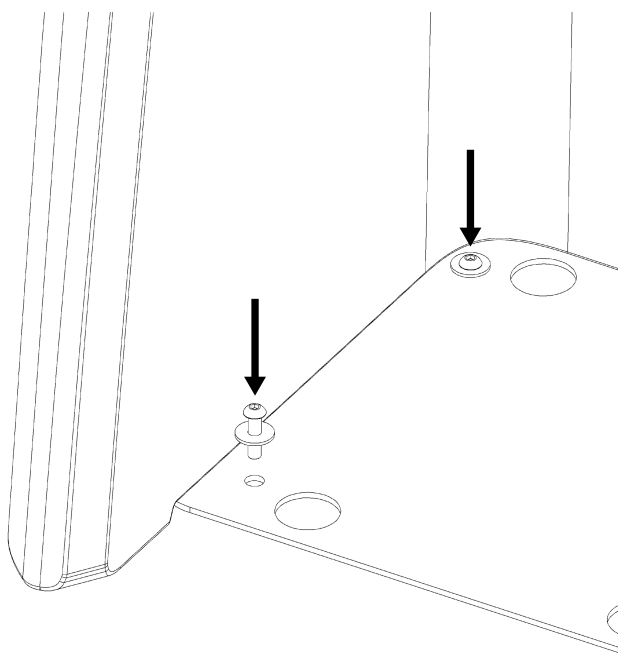

→ DISCLAIMER

- Ensure the proper and adequate hardware is used to secure furniture
- Ensure fixings are appropriate for the anchoring material
- Use fixings of an appropriate strength and consider using security fixings in challenging environments
- Consider using high strength thread-locker on fixings in challenging environments
- Ensure all gaps are sealed with the appropriate anti-pick mastic after product installation if necessary
- Please read all instructions carefully to ensure proper installation. Failure to read and follow instructions may result in inadequate product installation and void of warranty
- Pineapple shall not be held liable for any consequences caused by the improper installation of products to the installer or the end user



+44 (0)1622 237830

sales@pineapplecontracts.com

Pineapple